



DISCONTINUED

**MAXNET**<sup>®</sup>

Pat. #s U.S. 6,842,348; 7,043,236;  
Cdn. 2,404,840; 2,404,844

D3.1/CCAP<sup>™</sup>  
Compliant

## Amplifiers, RF Detectors & Switches

INSTALLATION MANUAL

Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Specifications subject to change without notice.

SignalOn® Series, MAXNET®, HFC Enhance®, PCI Filters®, Q-Series® & FiberLinx® are registered trademarks of ATX in the United States and/or other countries. SMAC<sup>SM</sup> is a service mark of ATX in the United States and/or other countries. Products or features contained herein may be covered by one or more U.S. or foreign patents. Other non-ATX product and company names in this manual are the property of their respective companies.

*ATX Confidential & Proprietary*

# TABLE OF CONTENTS

	<b>Page</b>
<b>1. <u>INSTALLATION INSTRUCTIONS</u> .....</b>	<b>1-1</b>
1.1. <u>Step 1</u> .....	1-1
1.2. <u>Step 2</u> .....	1-1
1.3. <u>Step 3</u> .....	1-2
1.4. <u>Step 4</u> .....	1-2
<b>2. <u>SERVICE &amp; SUPPORT</u>.....</b>	<b>2-1</b>
2.1. <u>Contact ATX Networks</u> .....	2-1
2.2. <u>Warranty Information</u> .....	2-1


This page left intentionally blank.

# INSTALLATION INSTRUCTIONS

## 1. Installation Instructions


### 1.1 Step 1

Approach chassis with a module on a forward angle. Make sure the captive screw on module lines up with a black triangle on top rail (slot 1, 3, 5, 7, 9, 11, 13, 15, or 17).

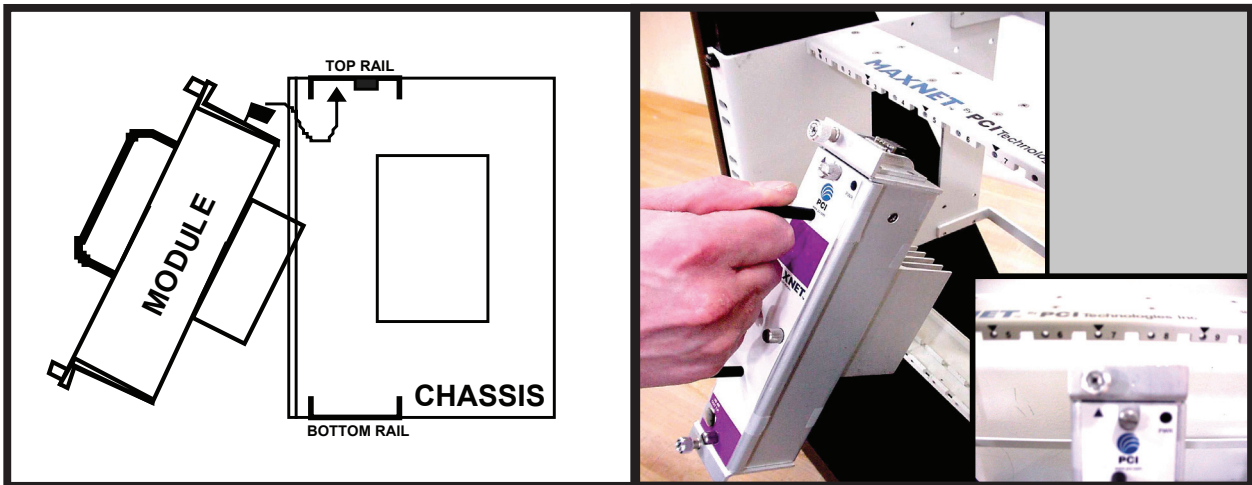


### 1.2 Step 2

Hook connector (located on top of amp module) under the top rail flange.

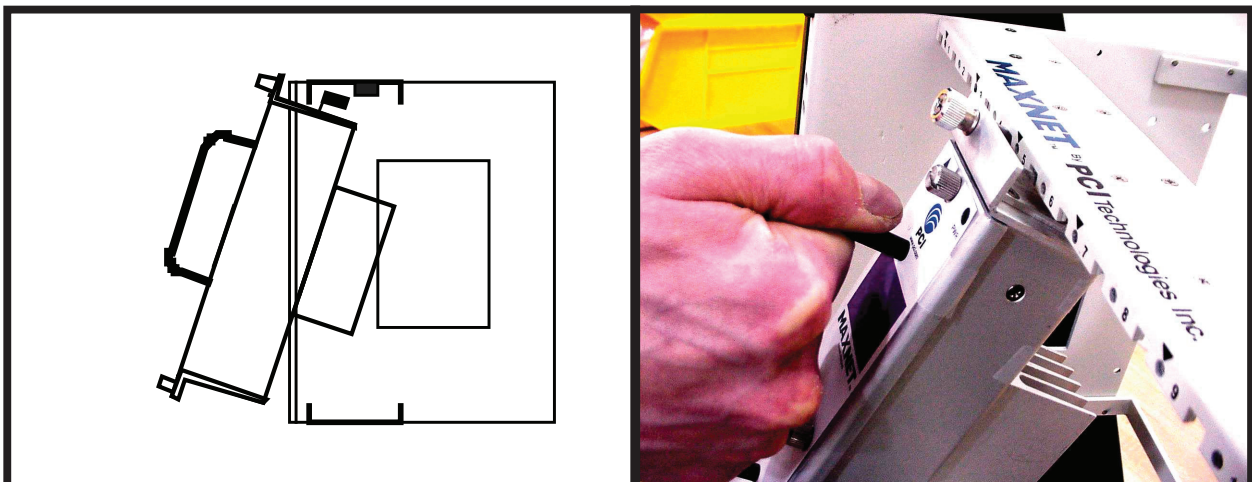


### 1.3 Step 3

Straighten the module by bringing the bottom of the module in until perpendicular.

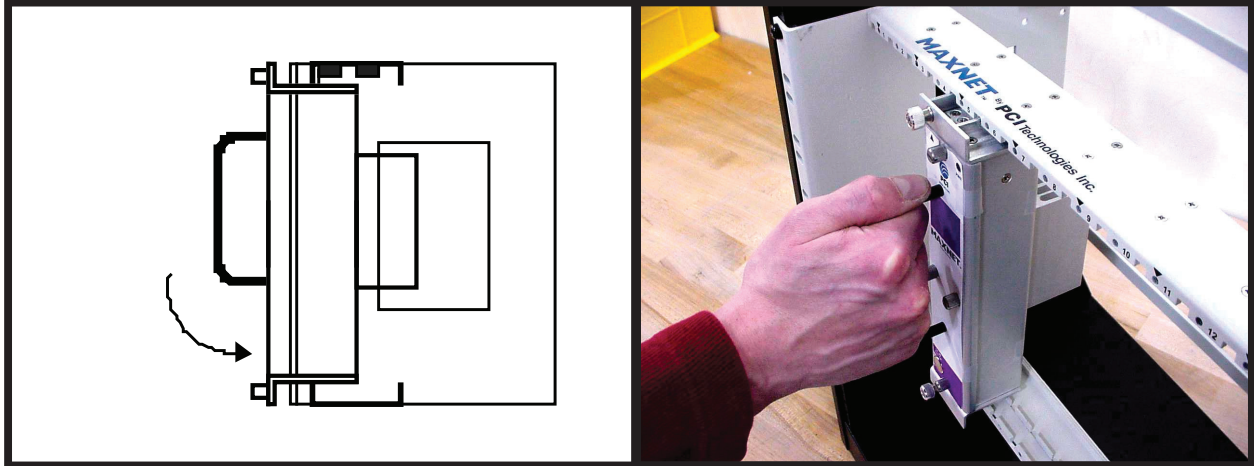

### 1.4 Step 4

Apply forward pressure until module connects flush to chassis rails. Then tighten captive module screws into chassis.

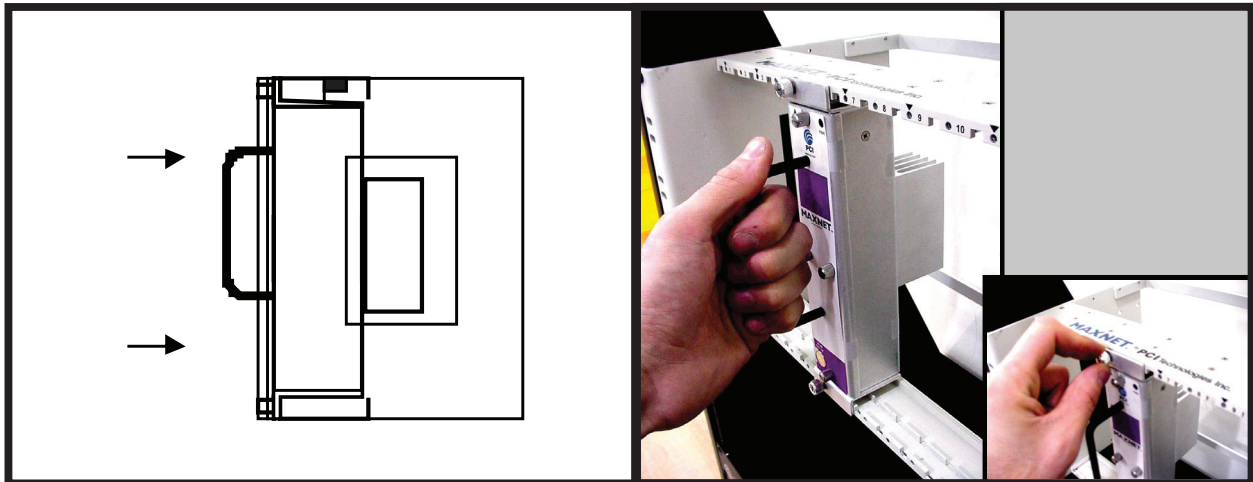

When removing module, follow instructions in reverse order.

**IMPORTANT:** Disconnect connector in top rail first before pulling on bottom of module so as not to damage the connector.

## SERVICE & SUPPORT

### 2. Service & Support

#### 2.1 Contact ATX Networks

Please contact ATX Technical Support for assistance with any ATX products. Please contact ATX to obtain a valid RMA number for any ATX products that require service and are in or out-of-warranty before returning a failed module to ATX.

##### TECHNICAL SUPPORT

Tel: 289.204.7800 – press 1  
Toll-Free: 866.YOUR.ATX (866.968.7289) USA & Canada only  
Email: [support@atx.com](mailto:support@atx.com)

##### SALES ASSISTANCE

Tel: 289.204.7800 – press 2  
Toll-Free: 866.YOUR.ATX (866.968.7289) USA & Canada only  
Email: [insidesales@atx.com](mailto:insidesales@atx.com)

##### FOR HELP WITH AN EXISTING ORDER

Tel: 289.204.7800 – press 3  
Toll-Free: 866.YOUR.ATX (866.968.7289) USA & Canada only  
Email: [orders@atx.com](mailto:orders@atx.com)  
Web: [www.atx.com](http://www.atx.com)

#### 2.2 Warranty Information

All of ATX Networks' products have a 1-year warranty that covers manufacturer's defects or failures.



© 2022 by ATX Networks Corp. and its affiliates (collectively "ATX Networks Corp."). All rights reserved. This material may not be published, broadcast, rewritten, or redistributed. Information in this document is subject to change without notice.

Rev. 10/22 (ANW0544)



**ATX Networks**

Tel: 289.204.7800 | Toll-Free: 866.YOUR.ATX (866.968.7289) | [support@atx.com](mailto:support@atx.com)

[www.atx.com](http://www.atx.com)