


# DVIS<sub>m</sub> MOUNTING INSTRUCTIONS





TOP OF UNIT

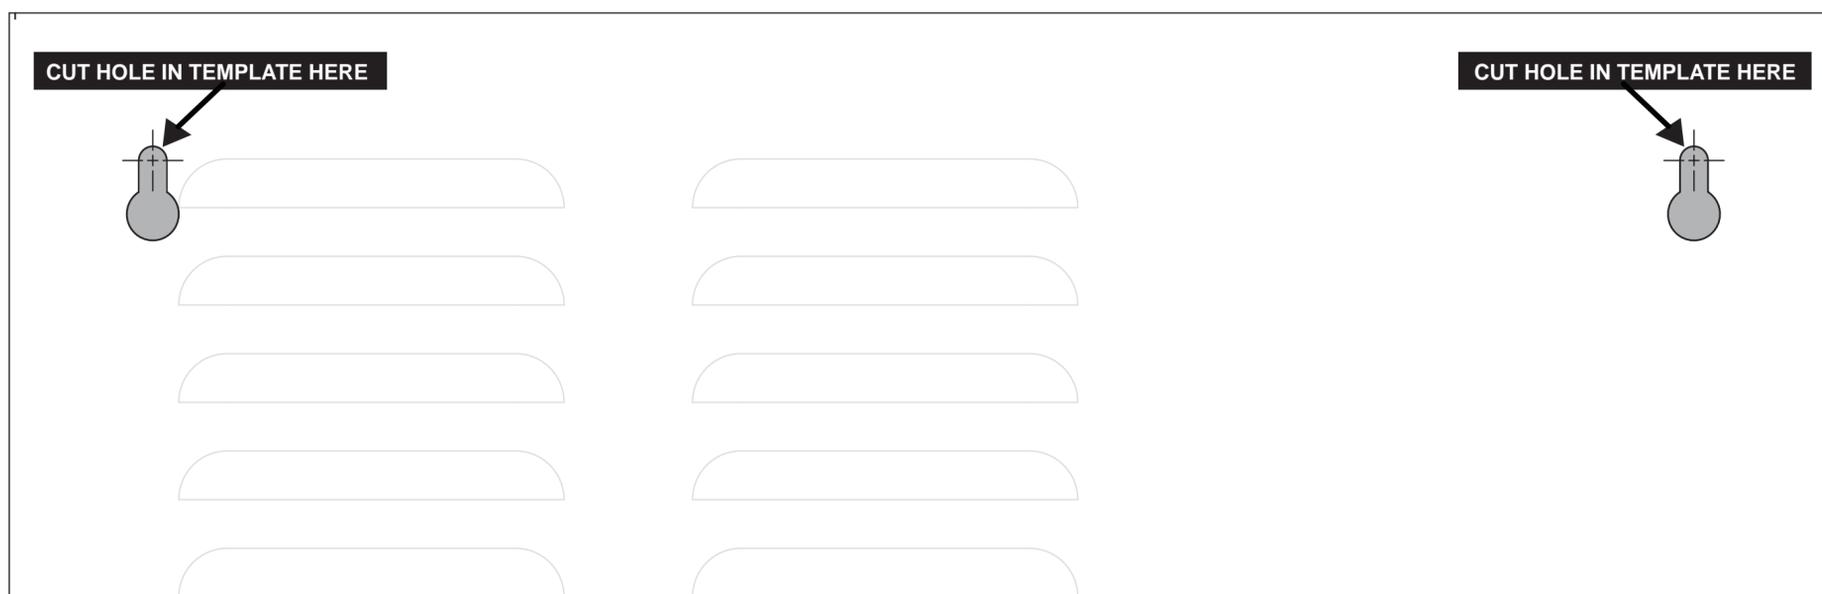

## MOUNTING INSTRUCTIONS:

1. Cut holes at locations marked with  $\dagger\dagger$  on mounting template.
2. Hold template to mounting surface in the exact location the DVIS<sub>m</sub> unit is to be mounted.
3. Choose a location to allow a **MINIMUM of 1 in.** of **CLEARANCE** around the unit in order for proper venting and space for cables.
4. Mark mounting surface through holes cut in locations marked with  $\dagger\dagger$ .
5. Pre-drill marked holes on mounting surface.
6. Install fastener securing devices into holes as necessary to ensure mounting fasteners will be capable of supporting a **MINIMUM** load of **50 lbs.**
7. **MAXIMUM SIZE** acceptable fasteners are **#10 Hex Lag Screws.**
8. Install fasteners into mounting holes.
9. Fasteners **MUST NOT PROTRUDE MORE** than **0.200 in.** from the mounting surface or into DVIS<sub>m</sub> housing.
10. Open unit and unscrew the two thumb screws securing the filter slot panel on the front right side of the unit.
11. If a filter is installed in the unit, disconnect the cables from the F connectors on the filter.
12. Remove filter slot panel and filter (if applicable) and place to the side.
13. Line up key holes on the rear of the DVIS<sub>m</sub> unit with fasteners on the mounting surface.
14. Push DVIS<sub>m</sub> unit against the mounting surface and slide downwards until fasteners are located at the top of the key holes.
15. Fasten down the screws in the two keyholes in the filter slot to firmly secure the unit to the mounting surface.
16. Replace filter and reconnect cables to the filter F connectors (if applicable).
17. Replace filter slot cover and fasten the two thumbscrews.

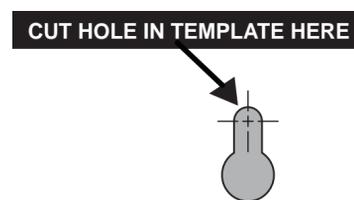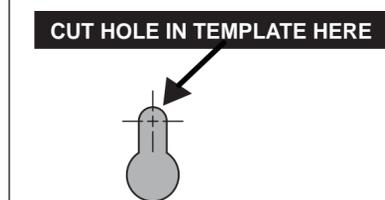

BOTTOM OF UNIT

## ACCESS AND CONFIGURATION INSTRUCTIONS:

1. **IMPORTANT: DO NOT CONNECT DVIS<sub>m</sub> RF OUTPUT SIGNAL TO NETWORK** before reading instruction manual and/or ensuring RF levels are set to appropriate levels for the premises in question.
2. Connect a laptop/PC to the Ethernet port on the front of the DVIS<sub>m</sub> using a **CROSSOVER CAT5e CABLE** (supplied with unit at time of shipping).
3. Connect video and audio (if required) sources and turn these external A/V sources ON.
4. Connect DVIS<sub>m</sub> to the mains powering and switch the unit ON. A green LED labeled POWER will indicate that the unit is switched ON.
5. Allow unit to boot up for 90 seconds.
6. \*Manually set the network address of the laptop/PC NIC to a **static IP in the 192.168.0.X subnet** (except 192.168.0.23) and the **subnet mask to 255.255.255.0.**
7. \*Open an Internet Browser and enter <http://192.168.0.23/site> into the address field.
8. A new window will open asking for a username and password. The defaults for these fields are:  
**Username: atx**  
**Password: atx**
9. The DVIS<sub>m</sub> GUI should appear in the web browser enabling further configuration. Please refer to the product manual for further configuration instructions.

\*NOTE: Points 6 and 7 refer the factory default settings of the DVIS<sub>m</sub> unit. If the network address of the DVIS<sub>m</sub> was modified prior to installing the unit in the field, access to the unit will be dictated according to the network address assigned to the unit.

## SUPPORT:

### DIGITAL VIDEO SUPPORT LINE

Tel: (905) 428-6068  
 Toll Free: (800) 565-7488 (USA & Canada only)  
 ▶ Press \*3 for **Technical Support**  
 ▶ Then press 1 for **Digital Video Products**  
 Email: digitalvideosupport@atxnetworks.com

### CUSTOMER SERVICE

ATX Networks  
 1-501 Clements Road West, Ajax, ON L1S 7H4 Canada  
 Tel: (905) 428-6068  
 Toll Free: (800) 565-7488 (USA & Canada only)  
 ▶ Press \*1 for **Customer Service**

Fax: (905) 427-1964  
 Toll Free Fax: (866) 427-1964 (USA & Canada only)  
 Email: support@atxnetworks.com



www.atxnetworks.com

(Dwg # 10956 Rev.2 01/12)